

Zippo

Genuine Zippo Windproof Lighter From timeless design to the unmistakable "click" ...from the quality of materials and workmanship to the Lifetime Guarantee - these are features that make a Zippo lighter so satisfying to own.

The fact that the Zippo windproof lighter has endured, virtually unchanged, for over 60 years is proof of its appeal to millions of users and collectors.

See inside for usage instructions, safety warnings and our world famous Lifetime Guarantee.



To Fill or re-flint your lighter see Fig. A

- **Fill only with Zippo fluid.**
- Hold case (Part A shown above) In one hand. Use the other hand to remove lighter Insert (Part B)
- Lift felt pad to reveal the packing material In the fuel chamber. Fill slowly. Saturate the packing with Zippo lighter fluid. Stop filling when fuel reaches top of packing.

Never overfill. If overfilled it can leak fuel. Fuel Is a skin Irritant

- insert lighter Insert back Into case. **Wipe lighter and hands dry before Igniting.** If overfilled do not put In pocket or next to skin. If fuel gets on skin wash the affected area If irritation persists or worsens see a Doctor.
- Be sure fuel can Is closed and there Is no spilled fuel In vicinity before Igniting. This Is flammable fluid.

To re-flint your Zippo lighter Flo. A,

Unscrew part Cat end of fuel chamber. Remove screw and attached spring. Be sure old flint Is removed from tube. Place new flint In tube and replace spring, screw lightly. Be sure screw Is turned as far as It will go; other- wise, cover will not close completely. It wheel binds after new flint is Inserted, turn wheel back-wards a few times. TIP: Keep extra flint supply under felt pad.

Always use genuine Zippo Fluid & Flints & Wicks

Zippo lighter fluid Is specially formulated for Zippo windproof lighters. It Is clean burning, quick lighting, long lasting and a versatile cleaning fluid.



WARNING:

KEEP LIGHTER OUT OF REACH OF CHILDREN - THIS LIGHTER IS NOT CHILD RESISTANT.

Lighter does not contain fuel when shipped from factory.

Safety Precautions:

Ignite lighter away from face and clothing. Zippo lighters do not self-extinguish.

Be careful not to drop lighter when It Is lit. Close d to extinguish flame.

When filled, lighter contains flammable fluid. Fuel is a skin irritant, do not overfill. Keep away from heat above 50° C (122' F) and avoid prolonged exposure to sunlight Do not Incinerate.

Trimming the wick

When wick becomes black from carbon, pull it up with pliers until clean wick appears. Cut It off even with top of chimney, then straighten the wick in the chimney.

Occasionally you may need to replace the wick. Change the wick by using tweezers to remove all packing from fuel chamber. Insert new wick downward through chimney, pulling through with tweezers. Replace packing In small pieces, interweaving the wick between the padding pieces. Be sure to trim wick even with chimney height

Zip - It's lit!

Zippo lighters are world-famous because they always light with a zip...even in the wind!

When using your Zippo lighter Indoors, open the lid and raise the lighter upward before flicking the wheel (see illustration, Fig. B). This upward movement eliminates gas lock which could prevent lighting on the first zip.



**Zippo Manufacturing
33 Barbour Street
Bradford, PA 16701**

In Canada:

**Imported by Zippo Canada Sales
P.O. Box 1014
Niagara Falls, ON., L2E 6S4
(905) 3583674**